



	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	70	81	81
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✗	✓	✓

ATK Race RT

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	66	85	90
Frontal release	✗	✗	✗
Boot doesn't sticks while walking (1)	✓	✓	✓

ATK Race
Revolution WC

the binding present an auto-locking system
The boot always pushes the locker into a locked position
--> release is impossible

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	72	88	90
Frontal release	✗	✗	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

Salomon MTN

(2) TLT6 and TLT7 are holding against the boot stop in the toe peice

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	73	81	87
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

PLUM Race

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	75	88	90
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

PLUM Guide

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	85	>90	>90
Frontal release	✗	✗	✗
Boot doesn't sticks while walking (1)	✓	✓	✓

G3 ION



	TLT 7	TLT 6	ISO Sole
MARKER Kingpin			
Walking Angle (°)	64	78	80
Frontal release	✗	✓	✓
Boot doesn't sticks while walking (1)	✗	✗	✓



	TLT 7	TLT 6	ISO Sole
FRITSCHI Vipec V1 2013 with pad			
Walking Angle (°)	46	68	74
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

	TLT 7	TLT 6	ISO Sole
FRITSCHI Vipec V1 2013 without pad			
Walking Angle (°)	62	74	80
Frontal release	✗	✓	✗
Boot doesn't sticks while walking (1)	✓	✓	✓


	TLT 7	TLT 6	ISO Sole
FRITSCHI Vipec V2 2014 with pad			
Walking Angle (°)	53	60	67
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

	TLT 7	TLT 6	ISO Sole
FRITSCHI Vipec V2 2014 without pad			
Walking Angle (°)	61	75	80
Frontal release	✗	✗	✗
Boot doesn't sticks while walking (1)	✓	✓	✓



	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	54	68	72
FRITSCHI Vipec V3 2015 with small pad Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	44	59	61
FRITSCHI Vipec V3 2015 with big pad Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

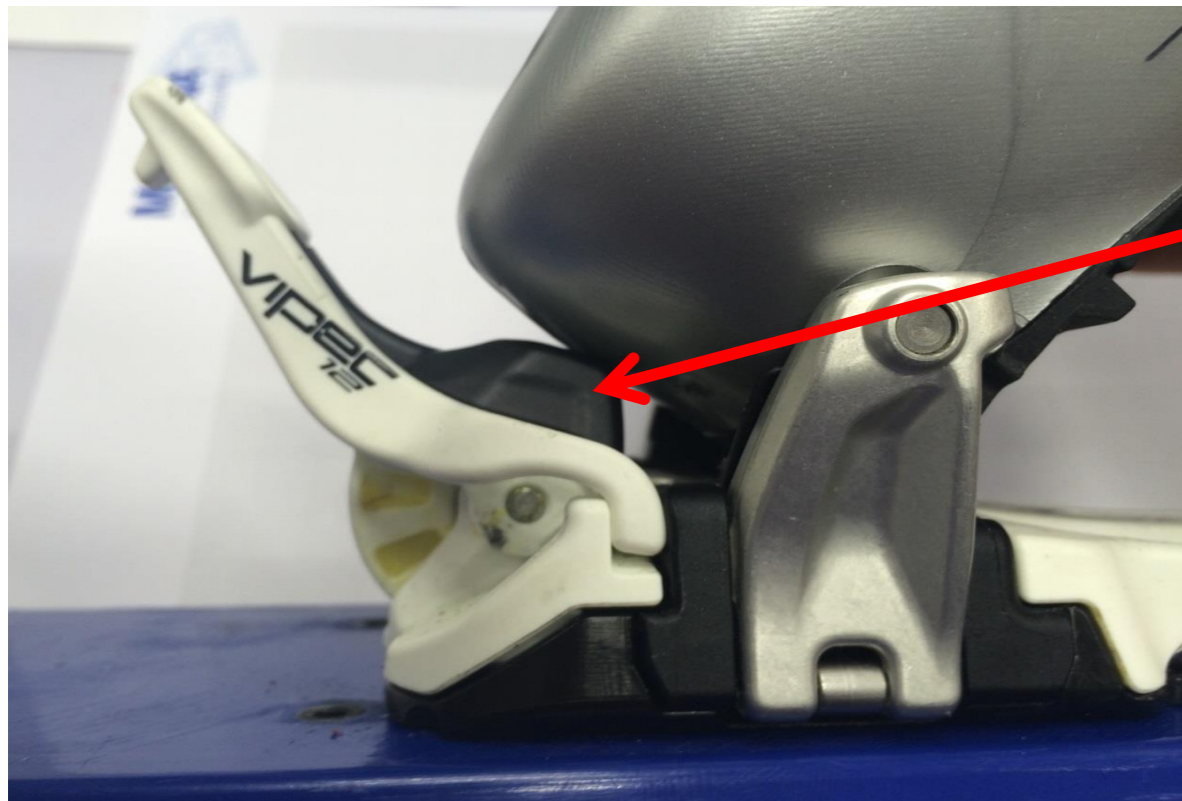

with every generation of the Vipec, this pad can be either used bigger/smaller (v3).
On the V1 and V2, the combination are either with or without the pad.



	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	81	90	90
Frontal release	✗	✓	✓
Boot doesn't sticks while walking (1)	✗	✗	✓

LTR 2.0

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	81	90	90
Frontal release	✗	✓	✓
Boot doesn't sticks while walking (1)	✗	✗	✓

Speed Superlite 2.0

With the TLT6, the release occurs but with a slightly higher force

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	70	90	90
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

Speed Turn / Expedition

TLT6 and TLT7 are holding against the boot stop in the toe peice

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	70	88	89
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

Radical 1 /Radical speed

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	70	86	89
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓


Radical 2

	TLT 7	TLT 6	ISO Sole
Walking Angle (°)	85	>90	>90
Frontal release	✓	✓	✓
Boot doesn't sticks while walking (1)	✓	✓	✓

Radical Speed 2.0



(1) Boot sticks in the toe piece while walking

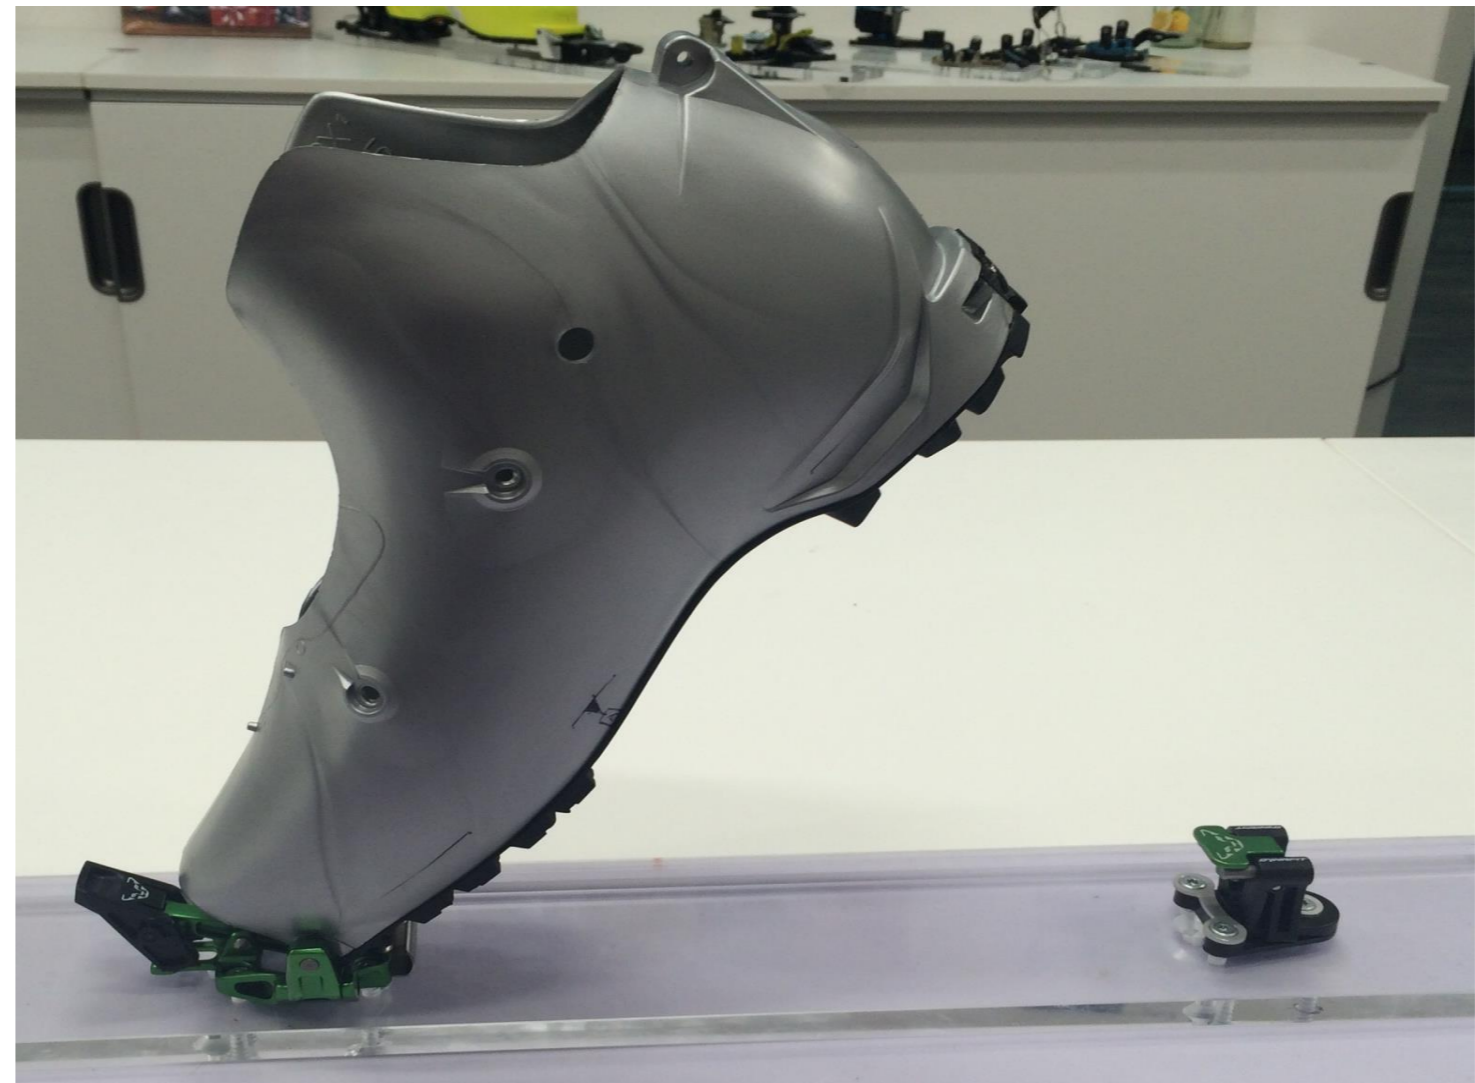

A 2 to 3mm cut would be sufficient to free this area, hence let the boot rotate completely freely in the toe piece



(2) TLT6 and TLT7 are holding against the boot stop in the toe peice

